

Durable, reliable, quality products for the electrical industry

21415 US Hwy 75 NW Warren, MN 56762
Phone: 218-745-5095 Email: nordic-sales@oldcastle.com

ND-202224-MG-125-X-X Installation Instructions on CBP-37-43-15A Series Box Pads

ND-202224 Bolt Kit Includes:

- (4) 5/16-18 x 1 1/4" SST Carriage Head Bolts
- (4) 5/16-16 SST Hex Nuts
- (4) 5/16 SST Flat Washers
- (4) 5/16 SST Lock Washers

Tools & Supplies Required: Drill, 5/16" Drill Bit, 1/2" Deep Socket, Socket Wrench or 1/2" Open End Wrench

Installation Procedure:

1. Place the ND-2022-MG-125-X-X with its front lined up with the front of the box pad.
2. Line up the ND-2022 pre-drilled front hole with the box pad's front insert hole (Figure 1).
3. Insert a 5/16" carriage bolt through the cabinet mounting hole and into the box pad insert. Install the flat washer, lock washer, and hex nut. Tighten securely, but do not overtighten.
4. Center the ND-2022 from the left and right sides of the box pad.
5. Once the cabinet has been centered on the box pad, use the rear pre-drilled mounting hole as a guide and drill a 5/16" hole into the box pad.
6. Fasten the bolting hardware.
7. Drill one 5/16" hole on each side of the cabinet using the locations shown in Figure 2. The holes should be positioned immediately outside the existing pre-drilled side mounting holes.
8. Fasten the bolting hardware (Figure 3).

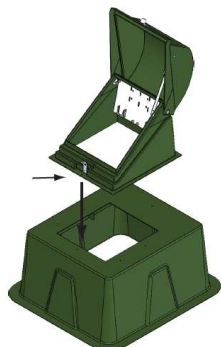


Figure 1

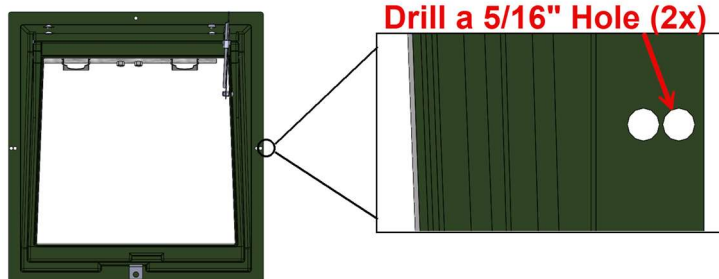


Figure 2

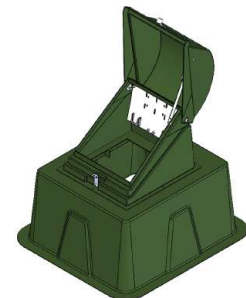


Figure 3