


# MPP-141480-MG Installation Instructions:

1. Measure the bottom width and depth of the cabinet's flanges.
2. Maximum burial depth is 30" deep.
3. Excavate the hole approximately 4" deeper than the maximum pedestal burial depth.
4. Add approximately 4" of gravel to the bottom of the hole.
5. Dig a hole approximately 4" deeper than the recommended burial depth and 6" wider than the bottom flange dimensions of the pedestal.
6. Add 4" of gravel to the bottom of the hole, machine tamp and level it.
7. Make sure the lid is fastened and tighten the penta-head bolt(s).
8. Lower the pedestal into the hole.
9. Using a level, ensure that the pedestal is level and plumb. If not level, add or remove gravel, re-tamp and level again.
10. Backfill with loose dirt, no chunks of dirt or rocks, no machine tamping.

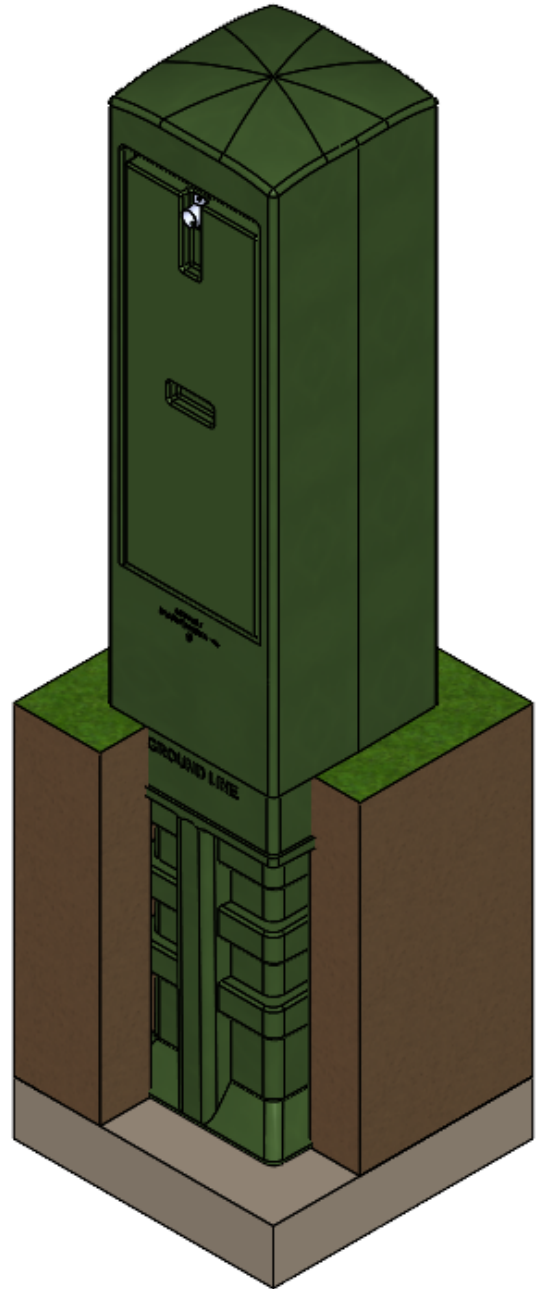

MPP-141480-MG



# Nordic Fiberglass, Inc.